



USER MANUAL

CORDLESS RATCHET WRENCH 12V d.c.

FERREX[®]



AFTER SALES SUPPORT

712901 ^{W2}

AU

☎ 1 800 130 489

💻 SERVICE-AU@PROTEL-SERVICE.COM

MODEL: FBT-CRW002

06/2026

3
YEAR WARRANTY

TABLE OF CONTENTS

1 General	3
2 Safety	3
2.1 Signal words explanation	3
2.2 Symbol explanation	3
2.3 General power tool safety warnings	3
2.4 Appliance-specific safety guidelines for cordless ratchets	4
2.5 Additional safety instructions for batteries and chargers	4
2.6 Original accessories/attachments	4
2.7 Intended use	4
3 Before first use	4
3.1 Check product and scope of delivery	4
3.2 Basic cleaning	4
4 Product overview/package content	4
5 Overview	4
6 Setup	5
6.1 Battery	5
7 Operation	5
7.1 Select direction of rotation	5
7.2 Switching on/off	5
8 Cleaning and maintenance	5
8.1 Cleaning	5
8.2 Maintenance	5
8.3 Storage	5
8.4 Transport	5
9 Technical data	5
9.1 Total vibration and noise emission values	5
9.2 Charging via USB	5
10 Disposal	5
10.1 Disposing of the Product	5
10.2 Disposing of the Packaging	5
11 Warranty	6
11.1 Warranty Certificate	6
11.2 Proof of Purchase	6
11.3 Extent of Warranty	6
11.4 Normal Wear and Tear	6
11.5 Exclusions	6
11.6 To Make a Claim	6
11.7 Warranty Details	6
11.8 Repair and Refurbished Goods or Parts Notice	6

1 GENERAL



This user manual (hereafter referred to as the “manual”) is part of this product, and contains important information on setup and use.

Read this manual carefully, especially the chapter **SAFETY**, before using the product. Failure to do so may result in personal injury and/or damage to the product.

Keep this manual for future use and reference. Make sure to include this manual when passing the product on to third parties. This manual is available in PDF format at www.ferrex12vpower.com.

2 SAFETY

2.1 SIGNAL WORDS EXPLANATION

The following signal words are used in this manual, on the product and/or the packaging.

DANGER!

» This signal word indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING!

» This signal word indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION!

» This signal word indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

CAUTION!

» This signal word indicates a hazardous situation which, if not avoided, could result in property damage.

NOTICE

» This signal word is a preferred signal word to address tips and practices not related to personal injury.

2.2 SYMBOL EXPLANATION

The following symbols are used in this manual, on the product or on the packaging.



Warning! To reduce the risk of injury, the user must read the instruction manual.



Always wear hearing protection. The effects of noise can cause hearing loss.



Wear safety glasses. When working with electric power tools, sparks, splinters, chips and dust particles may be generated and these can cause loss of sight.



Wear safety gloves!



Do not dispose of electric power tools with domestic refuse.



RCM stands for: “Regulatory Compliance Mark”. This means “Compliant with Australian regulations”. With the RCM mark, the manufacturer confirms that this unit complies with the applicable Australian regulations.

2.3 GENERAL POWER TOOL SAFETY WARNINGS

WARNING!

» Improper handling of the product may result in injury.

WARNING!

» **Read all safety warnings, instructions, illustrations and specifications provided with this power tool.** Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

» **Save all warnings and instructions for future reference.**

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

2.3.1 WORK AREA SAFETY

- Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.

- Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2.3.2 ELECTRICAL SAFETY

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

2.3.3 PERSONAL SAFETY

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- Use personal protective equipment. Always wear eye protection.** Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair and clothing away from moving parts.** Loose clothes, jewelry or long hair can be caught in moving parts.
- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.

2.3.4 POWER TOOL USE AND CARE

- Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
- Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

2.3.5 BATTERY TOOL USE AND CARE

- Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.

- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.
- e) **Do not use a battery pack or tool that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- f) **Do not expose a battery pack or tool to fire or excessive temperature.** Exposure to fire or temperature above 130 °C may cause explosion.
- g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

2.3.6 SERVICE

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.
- b) **Never service damaged battery packs.** Service of battery packs should only be performed by the manufacturer or authorized service providers.

2.4 APPLIANCE-SPECIFIC SAFETY GUIDELINES FOR CORDLESS RATCHETS

- a) **Hold the appliance using the insulated handles if you are carry out any work during which the attached tool could contact hidden power cables.** Contact with a live wire may electrify exposed metal parts of the tool and could give the operator an electric shock.
- b) **Secure the workpiece.** A workpiece securely held by a clamping device or vice is much safer than one held in your hand.
- c) **Hold the power tool firmly.** High reaction moments can occur for brief periods while tightening and loosening screws.
- d) **Switch the power off immediately if the tool blocks while in use.** Be prepared for high reaction moments as these can cause kickback.
- e) **Disconnect the battery pack before carrying out any work on the appliance.** This prevents the power tool from starting up unintentionally.
- f) **CAUTION, POWER CABLES! DANGER!** Ensure that you are not likely to hit power, gas or water supply lines when you are working with the power tool.

2.5 ADDITIONAL SAFETY INSTRUCTIONS FOR BATTERIES AND CHARGERS

When using power tools, the following safety precautions must always be observed to prevent electric shock, injury, and/or fire. Read and pay close attention to these recommendations before using a machine.

2.5.1 BATTERIES

⚠ WARNING!

- » Improper use of the battery can lead to fire, explosion, or other hazards.
- » Battery fluid can cause serious injury or damage to property. If battery fluid comes into contact with the skin, rinse the skin immediately with water. If a red rash, pain, or irritation occurs, consult a doctor immediately. If battery fluid comes into contact with the eyes, rinse the eyes immediately with water.

- Never attempt to open a battery.
- Do not expose the battery to water.
- Do not expose the battery to heat sources.
- Do not store batteries in places where the temperature may exceed 40 °C.
- Keep batteries out of the reach of children.
- Only charge batteries at an ambient temperature between 10 °C and 40 °C.
- Only charge batteries using the supplied charger/USB-C charging cable.
- Only use the batteries intended for use in the power tools. Using other batteries may result in injury and fire hazard.
- When disposing of batteries, follow the instructions in the section "WASTE DISPOSAL AND RECYCLING".
- Do not damage or deform the battery by puncturing it or subjecting it to impact, as this may result in injury and fire hazard.
- Do not charge damaged batteries.
- Be extra careful with the battery. Do not drop it on a hard surface and do not subject it to pressure or any other form of mechanical stress. Keep the battery away from extreme heat and cold.
- Important! Danger! Never short-circuit the battery or expose it to moisture. Do not store the battery together with metal parts that could cause the contacts to short-circuit. The battery may overheat, catch fire, or explode.
- The battery cells in the battery pack are not replaceable.

Under extreme conditions of use, liquid may leak from the battery. If you notice liquid on the batteries, carefully remove the liquid from the battery using a cloth. Avoid skin contact. If the liquid does come into contact with the skin or eyes, follow the instructions below.

2.5.2 CHARGERS

i NOTE

- » Important! USB charger or fast charger are not included.
- » Recommended charging values: 5.0 V d.c. / 1.8 A (type C).

The charger is designed for a specific voltage. Always check that the mains voltage corresponds to the voltage on the type plate.

⚠ WARNING!

- » Unplug the charger from the wall outlet when not in use and before cleaning and maintenance.

- Never replace the charger with a mains plug.
- Only use the charger to charge the included battery or batteries purchased specifically for the machine. Other batteries may rupture, causing injury and property damage.

- Never attempt to charge non-rechargeable batteries.
- Have a damaged power cord replaced by the manufacturer or an authorized service center to prevent hazards.
- Do not expose the charger to water.
- Do not open the charger.
- Do not puncture the charger.
- The machine/battery must be placed in a well-ventilated area during charging.
- The charger is intended for indoor use only.

2.6 ORIGINAL ACCESSORIES/ATTACHMENTS

Use only the additional equipment and accessories specified in the operating instructions. Using attachments or accessory tools other than those recommended in the operating instructions can lead to a risk of injury.

2.7 INTENDED USE

This appliance is intended for tightening and loosening hexagonal bolts and nuts.

- Only use the product as mentioned in this manual. Any other use is considered improper and may result in damage to property or injury to persons.
- Potential injury from improper use.
- The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

3 BEFORE FIRST USE

3.1 CHECK PRODUCT AND SCOPE OF DELIVERY

⚠ WARNING! SUFFOCATION HAZARD!

- » Keep all packaging materials away from children and pets; these materials are a potential source of danger, as you could suffocate on them or swallow small parts.

CAUTION! RISK OF INJURY!

- » Be careful when opening the packaging to avoid damaging the product. Avoid using sharp objects.

1. Remove the product from the packaging.
2. Remove the packaging material and all plastic/protective films.
3. Check that the delivery is complete (see **PRODUCT OVERVIEW** section).
4. Check the product or individual parts for damage. If this is the case, do not use the product. Contact the service center using the contact details provided on the front page of this manual.


3.2 BASIC CLEANING

Before first use, clean all parts of the product as described in the **CLEANING AND MAINTENANCE** section.

4 PRODUCT OVERVIEW/PACKAGE CONTENT

- 1× Cordless ratchet wrench
- 1× Rechargeable battery
- 1× USB-C charging cable
- 1× User manual

5 OVERVIEW

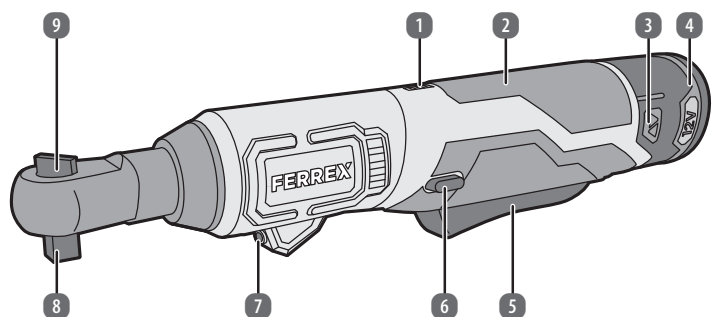

- 1 Battery charge level display
- 2 Handle
- 3 Release (battery pack)
- 4 Battery pack*
- 5 ON/OFF switch
- 6 Safety lock-out
- 7 LED work light
- 8 Tool holder
- 9 Rotation direction switch

6 SETUP

6.1 BATTERY

6.1.1 INSERTING THE BATTERY

1. Slide the battery onto the device until it locks in place.

6.1.2 REMOVING THE BATTERY

1. Detach the battery from the device by pressing and holding the unlocking button and pulling the battery off the device.
2. If required, charge the battery.

7 OPERATION

7.1 SELECT DIRECTION OF ROTATION

⚠ WARNING!

- » The rotation direction switch **9** may only be used/adjusted when the appliance is at a standstill.
- Select the direction of rotation by moving the rotation direction switch **9** to the right or left.

7.2 SWITCHING ON/OFF

7.2.1 TURN ON

Press and hold down the safety lock-out **6**. Then press and hold the ON/OFF switch **5**. Once the machine is running, you can release the safety lock-out **6**.

The LED work light **7** lights up when the machine is running. This provides illumination of the work area in poor lighting conditions.

7.2.2 SWITCHING OFF

Release the ON/OFF switch **5**.

⚠ CAUTION!

- » The tightening torque actually attained must always be checked with a torque wrench!

8 CLEANING AND MAINTENANCE

8.1 CLEANING

⚠ CAUTION! RISK OF SHORT CIRCUIT!

- » Remove the battery from the product before cleaning.

⚠ WARNING! RISK OF ELECTRIC SHOCK OR SHORT CIRCUIT

- » Never immerse the product in water or other liquids. Ensure that no water or other liquids enter the housing.

CAUTION! RISK OF DAMAGE!

- » Do not use aggressive cleaning agents, brushes with metal or nylon bristles, or sharp or metal cleaning objects such as knives, hard spatulas, and the like. These can damage the surfaces of the product.

8.2 MAINTENANCE

⚠ WARNING! RISK OF ELECTRIC SHOCK!

- » Remove the battery from the product before maintenance.
- » Any maintenance other than that specified in this manual must be carried out by a professional repair center. Contact customer service for maintenance.

8.3 STORAGE

CAUTION! RISK OF DAMAGE!

- » Avoid and protect the product from dust, water, moisture, frost, extreme temperatures, high humidity, and direct sunlight.
- Before storage, clean all parts as described in the **CLEANING AND MAINTENANCE** section.
- Dry the product completely before storing it.
- Always store the product in a cool and dry place, with an ambient temperature between 5°C and 20°C.
- Keep the product out of the reach of children and pets.

8.4 TRANSPORT

- Protect the product from vibrations or shocks, e.g. when transporting it in vehicles.
- Secure the product against slipping. Use bungee cords, ratchet straps, or similar means.

9 TECHNICAL DATA

No-load speed:	230 min ⁻¹
Chuck size:	3/8" (9.5 mm)
Max. torque:	50 Nm
Weight (without battery):	0.75 kg
Sound pressure level L _{PA} :	78 dB(A)
Uncertainty K _{PA} :	3 dB
Sound power level L _{WA} :	86 dB(A)
Uncertainty K _{WA} :	3 dB
Hand Arm Vibration _{ah,W} :	1.5 m/s ²
Uncertainty K:	1.5 m/s ²

BATTERY FBT-CLB014

Voltage:	12V d.c.
Capacity:	2 Ah, 24 Wh

CHARGER FBT-CLC011 (not included in scope of supply)

Input:	220 – 240 V ~ 50 – 60 Hz, 50 W
Output:	12 V d.c.
Charging current:	2400 mA

9.1 TOTAL VIBRATION AND NOISE EMISSION VALUES

The specified total vibration and noise emission values have been measured according to a standardized test procedure (EN 62841-1 & EN 62841-2-2) and can be used to compare power tools with each other. They can also be used for a preliminary assessment of exposure.

⚠ WARNING!

- » Vibration and noise emissions may differ from the specified values during actual use of the power tool, depending on how the power tool is used, in particular the type of workpiece being processed.
- » It is necessary to take safety measures to protect the user based on an assessment of vibration exposure during actual operating conditions (taking into account all parts of the operating cycle, e.g., periods when the power tool is switched off and periods when it is switched on but running without load).
- » Aim to keep exposure to vibration and noise as low as possible. Examples of measures to reduce vibration exposure include wearing gloves when using the tool, limiting working time, and using accessories in good condition.

9.2 CHARGING VIA USB

The battery can be charged via a USB-C charger (input 5.0 V d.c., 1.8 A) and/or a USB port.

i NOTE

- » Only the USB cable is included.

10 DISPOSAL

10.1 DISPOSING OF THE PRODUCT



Dispose of the product in accordance with the applicable laws and regulations for your country.

10.2 DISPOSING OF THE PACKAGING



The product has been packaged to protect it from damage in transit. Packaging materials are raw materials and can therefore be reused or recycled.

Do not dispose of electric power tools with domestic refuse.

The electric power tool is shipped in packaging to reduce transport damage. This packaging is a raw material and as such can either be reused or can be fed back into the raw material cycle. The electric power tool and its accessories are made from various materials such as metals and plastics. Take defective components to a special refuse collection point. Ask about these at your specialist shop or local council. The product and the user manual may be subject to changes. Technical data may be changed without prior notice.

10.2.1 BATTERIES

Think of the environment when disposing of batteries. Contact your local authorities to find out where your nearest disposal area is.

Do not dispose of batteries with domestic refuse.

Do not dispose of by burning, risk of explosion.

The product and the user manual may be subject to changes. Technical data may be changed without prior notice.

11 WARRANTY

11.1 WARRANTY CERTIFICATE

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

Congratulations! You have made an excellent choice of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defects due to manufacturing faults, ALDI will provide you with a warranty against defects as follows:

The product is guaranteed to be free from defects in workmanship and parts for a period of 3 years (dependant on product) from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion.

The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

11.2 PROOF OF PURCHASE

This warranty is valid for the original purchase and is not transferable. Please keep your purchase docket, tax invoice or receipt as the best proof of purchase, and as proof of date on which the purchase was made.

11.3 EXTENT OF WARRANTY

This warranty is limited to defects in workmanship or parts. All defective products or parts will be repaired or replaced. This warranty does not cover batteries or any other consumable items.

11.4 NORMAL WEAR AND TEAR

This warranty does not cover normal wear and tear to the products or parts.

11.5 EXCLUSIONS

This warranty does not cover:

- Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by the distributor.
- Any product that has not been installed, operated or maintained in accordance with the manufacturer's operating instructions provided with the product.
- Any product that has been used for purposes other than domestic use.
- Any damage caused by improper power input or improper cable connection.

11.6 TO MAKE A CLAIM

This warranty against defects is provided by:

ALDI Stores, Locked Bag 56, St Marys Delivery Centre, NSW 2760, Phone (02) 9675 9000.

If a defect in the goods appears within 3 years (the identified period on the packaging), you are entitled to claim a warranty, please contact or send all warranty claims to:

ACR Supply Partners Pty Ltd. 50 Old Wallgrove Road, Eastern Creek, NSW 2766, AUSTRALIA

Tel: 1 800 130 489 (Mon-Fri 8 am - 8 pm AEST)

Service-AU@protel-service.com

When making a return, please ensure the product is properly packaged so as to ensure that no damage occurs to the product during transit. Please provide the original or a copy of the proof of purchase. Also please make sure you have included an explanation of the problem. Please note that the costs of making a warranty claim, including any return postage, will be covered by the supplier identified above. Please note upon receiving your warranty claim, the supplier will send, via the post or email, a repair and refurbished goods or parts notice. Please provide your email address and advise the supplier, if you wish to obtain a repair and refurbished goods or parts notice via email.

11.7 WARRANTY DETAILS

The product is guaranteed to be free from defects in workmanship and parts for a period of 3 years from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

11.8 REPAIR AND REFURBISHED GOODS OR PARTS NOTICE

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1 800 130 489 or write to us at:

ACR Supply Partners Pty Ltd. 50 Old Wallgrove Road, Eastern Creek, NSW 2766 AUSTRALIA

Tel: 1 800 130 489 (Mon-Fri, 8 am - 8 pm AEST)

Service-AU@protel-service.com



BATAVIA B.V.,
Weth. Wassebaliestraat 6d,
7951 SN Staphorst, Netherlands

DISTRIBUTED BY **ALDI STORES**
1 SARGENTS ROAD,
MINCHINBURY NSW 2770
WWW.ALDI.COM.AU

MADE IN CHINA

V01/0126