



USER MANUAL

CORDLESS MULTITOOL 12V d.c.

FERREX®



BATAVIA B.V.
WETH. WASSEBALIESTRAAT 6D
NL-7951 SN STAPHORST, NL
WWW.BATAVIAPOWER.COM

AFTER SALES SUPPORT

715006 ^{W²}

AU

☎ 1800 130 489

📧 SERVICE-AU@PROTEL-SERVICE.COM

MODEL: FBT-CMT004

06/2026

3
YEAR WARRANTY



CONTENT

1 General	3
2 Safety	3
2.1 Explanation of signal words	3
2.2 Explanation of symbols	3
2.3 General power tool safety warnings	3
2.4 Safety for multifunctional machines	5
2.5 Additional safety instructions for batteries and chargers	6
2.6 Intended use	6
3 Scope of delivery	7
4 Product components	7
5 Before first use	7
5.1 Check product and scope of delivery	7
5.2 Basic cleaning	7
5.3 Attaching a saw blade or scraper blade	7
5.4 Attaching the sanding disc and sanding sheets	7
5.5 Selecting the right grit sanding sheet	7
5.6 Instructions for correct use of the dust extraction system	8
6 Use	8
6.1 Battery	8
6.2 Switching the machine on and off	8
6.3 Adjusting the speed	8
6.4 Sawing	8
6.5 Sanding	9
6.6 Scraping	9
6.7 LED light	9
7 Accessories	9
8 Cleaning and maintenance	9
8.1 Cleaning	9
8.2 Maintenance	9
8.3 Storage	9
8.4 Transport	9
9 Technical data	9
9.1 Total vibration and noise emission values	10
9.2 Charging via USB	10
10 Waste disposal and recycling	10
10.1 Disposing of the Packaging	10
10.2 Disposing of the Product	10
10.3 Battery disposal	10
11 Warranty	10
11.1 Warranty Certificate	10
11.2 Proof of Purchase	10
11.3 Extent of Warranty	10
11.4 Normal Wear and Tear	10
11.5 Exclusions	10
11.6 To Make a Claim	11
11.7 Warranty Details	11
11.8 Repair and Refurbished Goods or Parts Notice	11



1 GENERAL



User manuals provide useful tips on how to use your new device. They help you to use all the functions, prevent misunderstandings, and avoid damage. Please take the time to read this manual carefully and keep it as a

reference.

Please read all safety instructions!

This manual contains important information about operating and handling the device. Keep this user manual for future reference. Please pass it on together with the device if it is handed over to third parties. This manual is available in PDF format at www.ferrex12vpower.com.

2 SAFETY

2.1 EXPLANATION OF SIGNAL WORDS

The following signal words are used in this manual, on the product, and/or on the packaging.

DANGER!

- » This signal word indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING!

- » This signal word indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION!

- » This signal word indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

CAUTION!

- » This signal word indicates a hazardous situation which, if not avoided, could result in property damage.

NOTE

- » This signal word is a preferred signal word for tips and practices that are not related to personal injury.

2.2 EXPLANATION OF SYMBOLS

The following symbols are used in the user manual or on the product:



WARNING – Read the instructions to reduce the risk of injury.



Always wear hearing protection. Exposure to noise may cause hearing damage.



Wear safety glasses. Sparks generated during operation, or splinters, chips, and dust from the machine can cause eye damage.



Do not expose the battery to temperatures above 40 °C.



Do not expose the battery to fire. Explosion hazard!



Prevent the battery from coming into contact with water. Do not immerse the battery in water. Explosion hazard!



RCM stands for: “Regulatory Compliance Mark”. This means “Compliant with Australian regulations”. With the RCM mark, the manufacturer confirms that this unit complies with the applicable Australian regulations.

2.3 GENERAL POWER TOOL SAFETY WARNINGS

WARNING!

- » **Read all safety warnings, instructions, illustrations and specifications provided with this power tool.** Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.
- » **Save all warnings and instructions for future reference.**

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

2.3.1 WORK AREA SAFETY

- Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2.3.2 ELECTRICAL SAFETY

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.



- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

2.3.3 PERSONAL SAFETY

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.

2.3.4 POWER TOOL USE AND CARE

- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.

- e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

2.3.5 BATTERY TOOL USE AND CARE

- a) **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b) **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
- c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.
- e) **Do not use a battery pack or tool that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
- f) **Do not expose a battery pack or tool to fire or excessive temperature.** Exposure to fire or temperature above 130 °C may cause explosion.
- g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

2.3.6 SERVICE

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.
- b) **Never service damaged battery packs.** Service of battery packs should only be performed by the manufacturer or authorized service providers.



2.4 SAFETY FOR MULTIFUNCTIONAL MACHINES

General safety for multifunctional, corded and cordless, rotary and oscillating hand-held machines.

WARNING!

- » Contact with electrical or gas lines may result in fire, electric shock, and explosions. Piercing water pipes may result in property damage and electric shock. Check for the presence of pipes using suitable detectors. Be careful when making blind cuts and plunge cuts, where the starting point of the blade or accessory is not visible.

WARNING!

- » Some materials and coatings in older buildings may contain asbestos and should be handled with care. If asbestos is expected or discovered, immediately contact your local health department for advice on removal. The assistance of a specialist may be required.

WARNING!

- » If a metal accessory comes into contact with a power cable, the metal parts of the machine may become live, which could give the user an electric shock. Always hold the machine by the insulated grip during use.

WARNING!

- » DO NOT work on damp/wet materials and do not use accessories that require liquid coolants. Ingressing liquids cause an electrical hazard and destroy the machine.

WARNING!

- » Dust generated during use of the machine may be harmful. Beech, oak, teak, natural wood, artificial wood, and certain treatments such as paint and varnish are toxic. Lead-based paint is common in buildings from 1960 and earlier. Wearing a suitable dust mask is mandatory. Use a dust extraction system to prevent dust accumulation. Most dusts pose a fire hazard.

- When changing accessories, wearing protective gloves is mandatory.** Some blades and accessories are very sharp. Allow accessories to cool down after use.
- Keep your workplace clean.** Various materials, such as wood and metal dust, are flammable. Light alloy dust, including magnesium, burns or explodes easily.
- Do not treat the work surface with solvent-containing liquids.** When these materials become hot during use of the machine, they may catch fire or produce toxic fumes.

WARNING!

- » Do not attach accessories with a maximum speed lower than the no-load speed of the machine.
- Replace accessories or perform maintenance only when the machine is disconnected from the power source.** Be extremely careful when the machine is equipped with a fixed, charged battery.

- Use accessories that meet the machine's specifications. Accessories must be compatible in size and speed.** Do not process materials thicker than the maximum capacity of the machine.
- Only use an adapter for non-standard accessories or blades if the adapter is specifically designed for the machine or approved by the manufacturer.**
- DO NOT modify accessories so that they can be used for machines for which the accessories are not intended.**
- Do not use damaged, bent, broken, rusted, or worn accessories.** These accessories may become further damaged during use, which could result in injury to the user. Check accessories before each use and discard them immediately if they are in poor condition. Only use sharp blades.
- Ensure that accessories are properly attached to the machine and that the attachment aids are removed before use.**
- Do not attempt to free jammed blades/accessories before disconnecting the machine from the power source.**
- Inspect the workpiece before use to ensure it is suitable for the accessory to be used.** Remove nails, staples, and other fasteners before starting work.
- Clamp the workpiece securely to the workbench.**
- Ensure adequate lighting.** If your view of the workpiece is poor, strengthen and reposition the lighting. Never remove your safety goggles.
- Do not use the machine near flammable materials.** Sparks from metal cutting often cause sawdust fires.
- When batteries need to be charged outdoors, protect the power source and charger from bad weather conditions.**
- Start the machine and allow it to reach full speed before bringing the machine into contact with the workpiece.** Adjust the speed of the machine using the control wheel to suit the accessory being used.
- Do not apply excessive pressure to the machine.** Let the machine and accessory do the work. This will allow you to maintain optimal control of the machine as it cuts through the material and minimize wear and tear, thereby maximizing its service life. Excessive pressure may bend and twist the accessory, which could result in breakage and personal injury. Hold the machine with both hands whenever possible and handle it with care.
- Sawing, cutting, and sanding generate heat.** This can have an effect on the workpiece and the machine. Monitor the heat level and switch off the machine when necessary to allow it to cool down before resuming work. Some machines cool down faster when run at full speed without a load.
- Dust may be sucked into the machine through the ventilation holes, which can result in electrical hazards that destroy the machine.** Minimize the level of dust/sawdust in the workshop and keep the ventilation holes clear.
- Do not reach under the workpiece, support the workpiece against your body, or hold the workpiece while it is being processed.** Blades and accessories can cause serious injury.
- Wearing vibration-resistant gloves is recommended, especially during prolonged use.**



- v) **When using machines with rotating parts, wearing clothing and/or gloves with loose threads and jewelry is prohibited.** Loose threads can be caught by the parts, pulling your hand into the accessory, which can result in serious injury. Wear tight-fitting work clothes.
- w) **Do not allow sanding sheets to wear down completely.** This damages the sanding disc, causing parts to fly off the disc, resulting in personal injury.
- x) **Do not touch moving sanding sheets.**
- y) **Wire brush bristles can easily pierce thin clothing and skin.** Do not apply too much pressure to wire brushes.

i NOTE

- » Only use the machine for its intended purpose. Any other use is considered misuse. The user, not the manufacturer, is liable for damage and/or injury resulting from misuse. The manufacturer is not liable for modifications to the machine and any resulting damage/injury.

2.5 ADDITIONAL SAFETY INSTRUCTIONS FOR BATTERIES AND CHARGERS

When using power tools, the following safety precautions must always be observed to prevent electric shock, injury, and/or fire. Read and pay close attention to these recommendations before using a machine.

2.5.1 BATTERIES

⚠ WARNING!

- » Improper use of the battery can lead to fire, explosion, or other hazards.
- » Battery fluid can cause serious injury or damage to property. If battery fluid comes into contact with the skin, rinse the skin immediately with water. If a red rash, pain, or irritation occurs, consult a doctor immediately. If battery fluid comes into contact with the eyes, rinse the eyes immediately with water.
- Never attempt to open a battery.
- Do not expose the battery to water.
- Do not expose the battery to heat sources.
- Do not store batteries in places where the temperature may exceed 40 °C.
- Keep batteries out of the reach of children.
- Only charge batteries at an ambient temperature between 10 °C and 40 °C.
- Only charge batteries using the supplied charger/USB-C charging cable.
- Only use the batteries intended for use in the power tools. Using other batteries may result in injury and fire hazard.
- When disposing of batteries, follow the instructions in the section "**WASTE DISPOSAL AND RECYCLING.**"
- Do not damage or deform the battery by puncturing it or subjecting it to impact, as this may result in injury and fire hazard.
- Do not charge damaged batteries.

- Be extra careful with the battery. Do not drop it on a hard surface and do not subject it to pressure or any other form of mechanical stress. Keep the battery away from extreme heat and cold.
- Important! Danger! Never short-circuit the battery or expose it to moisture. Do not store the battery together with metal parts that could cause the contacts to short-circuit. The battery may overheat, catch fire, or explode.
- The battery cells in the battery pack are not replaceable.

Under extreme conditions of use, liquid may leak from the battery. If you notice liquid on the batteries, carefully remove the liquid from the battery using a cloth. Avoid skin contact. If the liquid does come into contact with the skin or eyes, follow the instructions above.

2.5.2 CHARGERS

i NOTE

- » Important! USB charger or fast charger are not included.
- » Recommended charging values: 5.0V d.c. / 1.8 A (type C).

The charger is designed for a specific voltage. Always check that the mains voltage corresponds to the voltage on the type plate.

⚠ WARNING!

- » Unplug the charger from the wall outlet when not in use and before cleaning and maintenance.
- Never replace the charger with a mains plug.
- Only use the charger to charge the included battery or batteries purchased specifically for the machine. Other batteries may rupture, causing injury and property damage.
- Never attempt to charge non-rechargeable batteries.
- Have a damaged power cord replaced by the manufacturer or an authorized service center to prevent hazards.
- Do not expose the charger to water.
- Do not open the charger.
- Do not puncture the charger.
- The machine/battery must be placed in a well-ventilated area during charging.
- The charger is intended for indoor use only.

2.6 INTENDED USE

Cordless oscillating multi-tool with a quick-change system for accessories. Designed for sawing and sanding work by means of rapid oscillation of a saw blade, file, or sanding pad.


- Only use the product as described in these instructions. Any other use is considered improper and may result in material damage or even personal injury.
- Possible injury if used incorrectly.
- The manufacturer or dealer accepts no liability for damage caused by improper or incorrect use.



3 SCOPE OF DELIVERY

- 1× Cordless multi-tool
- 1× Battery
- 1× USB-C charging cable
- 1× Dust extraction adapter set
- 1× Saw blade
- 1× Scraper
- 1× Diamond saw blade
- 1× Sanding pad 90 × 90 × 90 mm
- 3× Sandpaper. Grit: 60/80/120
- 1× User manual

4 PRODUCT COMPONENTS

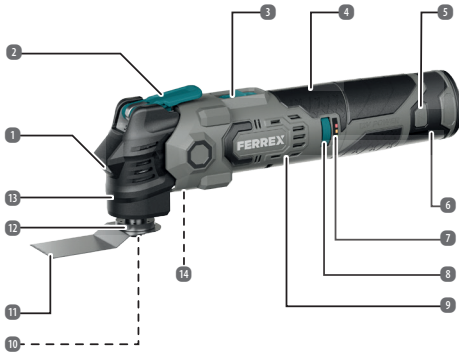

- | | |
|---|---|
| 1. Work light | 8. Speed control |
| 2. Quick-release fastener for tool change | 9. Motor ventilation openings |
| 3. ON/OFF switch | 10. Quick-release bolt |
| 4. Handle | 11. Accessory |
| 5. Battery lock | 12. Tool holder |
| 6. Battery | 13. Oscillating drive |
| 7. Battery charge indicator | 14. Screw point dust extraction adapter |

5 BEFORE FIRST USE

5.1 CHECK PRODUCT AND SCOPE OF DELIVERY

⚠ WARNING! SUFFOCATION HAZARD!

- » Keep all packaging materials away from children and pets; these materials are a potential source of danger, as you could suffocate on them or swallow small parts.

⚠ CAUTION! RISK OF INJURY!

- » Be careful when opening the packaging to avoid damaging the product. Avoid using sharp objects.

1. Remove the product from the packaging.

2. Remove the packaging material and all plastic/protective films.
3. Check that the delivery is complete (see **PRODUCT OVERVIEW** section).
4. Check the product or individual parts for damage. If this is the case, do not use the product. Contact the service center using the contact details provided on the front page of this manual.

5.2 BASIC CLEANING

Before first use, clean all parts of the product as described in the **CLEANING AND MAINTENANCE** section.

5.3 ATTACHING A SAW BLADE OR SCRAPER BLADE

1. Lift the quick-release lever **2** and push it forward to unlock the clamping mechanism.

i NOTE

- » This requires some force.

2. Insert a compatible blade or accessory into the tool holder **12**.
3. Make sure you insert the correct end of the accessory into the attachment.
4. Lock the accessory using the quick-release bolt **10** and place the lever in the closed position.

i NOTE

- » Curved blades should be attached so that the end of the blade points away from the machine.

5.4 ATTACHING THE SANDING DISC AND SANDING SHEETS

1. Attach the sanding pad according to the instructions above ("Attaching a sawing or scraping blade").
2. Select a suitable sanding sheet for the work to be carried out (see "**SELECTING THE CORRECT GRAIN SIZE SANDING SHEET**").
3. The sanding pad and sanding sheets have a Velcro backing. Align the corners of the sanding sheet with the corners of the sanding pad and press the sanding sheet down gently.

5.5 SELECTING THE RIGHT GRIT SANDING SHEET

- Sanding sheets are available in different grades: coarse (60 grit), medium (80 grit), and fine (120 grit).
- Use a coarse sanding sheet for sanding rough surfaces, medium sheets for smoothing surfaces, and fine sheets for finishing surfaces.
- To maximize the sanding finish, use high-quality sanding sheets.
- It is recommended to test the sheets on a piece of scrap material to determine the optimal grit size. If the surface still shows spots/marks after sanding, sand them away with a coarser sanding sheet before returning to the original grit size, or use a new sanding sheet to remove the marks before switching to a finer sanding sheet.

5.6 INSTRUCTIONS FOR CORRECT USE OF THE DUST EXTRACTION SYSTEM

This device produces sawdust and dust particles. To reduce exposure to dust, the device must be used with a compatible dust extraction system. Failure to use dust extraction may reduce performance and pose health risks.

This product comes with a dust extraction adapter for connection to a vacuum cleaner.

i NOTE

- » Even with the vacuum cleaner connected, fine dust may escape during use; always wear a suitable dust mask.

⚠ WARNING!

- » Ensure that there is no battery in the device before connecting the dust extraction system.
- » Do not use with a blocked or clogged system.

5.6.1 CONNECTING THE DUST EXTRACTION SYSTEM

1. Align the dust extraction adapter with the head of the device. The adapter only fits onto the device in one way.
2. Tighten the screw in the screw point of the dust extraction adapter **14**.
3. The device is now ready to connect the desired dust extraction system.
 - Only use the dust extraction adapter supplied.
 - Connect a vacuum cleaner hose of the correct diameter (Ø 35 mm) in a safe and airtight manner.
 - Ensure that the connection is secure, without any openings, cracks, or leaks, so that all dust is extracted into the extraction system.
 - Avoid sharp bends, kinks, or abrupt angles in the connection, as this can reduce the airflow.
 - The hose must be of a suitable length and stiffness so that it does not interfere with the operation of the device or pose a tripping hazard.
 - Always switch on the dust extraction system before starting the device and ensure constant extraction during operation.

5.6.2 USE OF THE DUST EXTRACTION SYSTEM

- During use, always ensure that the extraction remains effective; do not use the device if the dust collection system is disconnected, blocked, or has significantly reduced suction power.
- If suction power decreases or if vibrations/noises indicate a blockage, stop the device, remove the battery, and check/clean the hose or adapter.
- Direct the exhaust of the extraction system away from the user and the work area so that dust or debris is not blown back onto the workpiece or towards the user.

⚠ WARNING!

- » Do not allow sparks or hot chips to enter the extraction hose.

6 USE

⚠ WARNING!

- » Appropriate protective equipment, including face, respiratory, and hearing protection, must be worn at all times.
- » To protect the user from vibrations, wearing protective gloves is recommended.

6.1 BATTERY

6.1.1 INSERTING THE BATTERY

Slide the charged battery into the battery holder until it clicks into place.

6.1.2 REMOVING THE BATTERY

To remove the battery, press the battery release buttons and pull the battery out of the power tool. Do not use force.

6.2 SWITCHING THE MACHINE ON AND OFF

1. Set the variable speed adjustment wheel **8** to the minimum speed.
2. Hold the machine firmly by the handle, with your thumb on the on/off switch **3**.
3. Slide the switch forward to turn on the machine.
4. Slide the switch backward to turn the machine off.

⚠ WARNING!

- » Allow the machine to reach full speed before it comes into contact with the workpiece.
- » The ventilation holes must be kept clear so that hot air can escape. Dust and sawdust block the ventilation holes, causing the machine to overheat. Metal sawdust can permanently damage the machine. Prevent the accumulation of dust and sawdust. Keep your workplace clean using a vacuum cleaner.
- » Do not inhale dust. Wear a suitable dust mask. Some substances are toxic.

6.3 ADJUSTING THE SPEED

- The oscillating speed of the machine can be adjusted using the adjustment wheel **8**.
1. A higher number on the wheel indicates a higher speed.
 2. A lower number on the wheel indicates a lower speed.

i NOTE

- » Adjust the speed to optimize sanding on different materials. Refer to the sanding sheet manufacturer's instructions regarding speed selection.

6.4 SAWING

- Ensure that the saw blade is sharp and in good condition.
- Do not use damaged or deformed saw blades.
- When sawing light building materials, refer to the manufacturer's recommendations.

- Plunge cuts can only be made in soft materials such as wood and chipboard.
- When using saw blades that are not suitable for sawing metal, ensure that the workpiece is free of nails, staples, etc. Remove metal objects or use a metal saw blade.

6.5 SANDING

- The material removal rate and sanding pattern are determined by the sanding sheet type, the oscillation speed, and the pressure applied.
- Apply even pressure to the machine to optimize the durability of the sheets.
- Excessive pressure does not result in faster material removal, but results in premature wear of the sanding sheet and possible damage to the machine.
- For precise sanding work in corners and on edges, sand only with the tip of the sanding sheet.
- Sanding sheets used for sanding metal should not be used for sanding wood.
- Regularly remove dust and dirt from the sanding disc so that the sanding sheet is in full contact with the workpiece.

6.6 SCRAPING

For scraping work, select a higher oscillation speed.

On soft surfaces, such as wood, work at a short angle and apply only light pressure to the machine so that the blade does not bite into the workpiece.

6.7 LED LIGHT

The LED light 1 turns on automatically when you press the On/Off switch 3.

7 ACCESSORIES

Only use accessories with a permitted speed that is at least as high as the highest no-load speed of the machine.

8 CLEANING AND MAINTENANCE

8.1 CLEANING

⚠ CAUTION! RISK OF SHORT CIRCUIT!

- » Remove the battery from the product before cleaning.

⚠ WARNING! RISK OF ELECTRIC SHOCK OR SHORT CIRCUIT

- » Never immerse the product in water or other liquids. Ensure that no water or other liquids enter the housing.

CAUTION! RISK OF DAMAGE!

- » Do not use aggressive cleaning agents, brushes with metal or nylon bristles, or sharp or metal cleaning objects such as knives, hard spatulas, and the like. These can damage the surfaces of the product.

8.2 MAINTENANCE

⚠ WARNING! RISK OF ELECTRIC SHOCK!

- » Remove the battery from the product before performing maintenance. Any maintenance other than that specified in this manual must be carried out by a professional repair center. Contact customer service for maintenance.

8.3 STORAGE

CAUTION! RISK OF DAMAGE!

- » Avoid and protect the product from dust, water, moisture, frost, extreme temperatures, high humidity, and direct sunlight.
- Before storage, clean all parts as described in the **CLEANING AND MAINTENANCE** section.
- Dry the product completely before storing it.
- Always store the product in a cool and dry place, with an ambient temperature between 5°C and 20°C.
- Keep the product out of the reach of children and pets.

8.4 TRANSPORT

- Protect the product from vibrations or shocks, e.g. when transporting it in vehicles.
- Secure the product against slipping. Secure the product against slipping. Use bungee cords, ratchet straps, or similar means.

9 TECHNICAL DATA

No-load speed:	5000 – 20000 min ⁻¹
Oscillation:	3,2°
Weight (without battery):	790 g
Sound pressure level L_{PA}:	95 dB(A)
Uncertainty K_{PA}:	3 dB
Sound power level L_{WA}:	104 dB(A)
Uncertainty K_{WA}:	3 dB
Hand Arm Vibration ah:	8.978 m/s ²
Uncertainty K:	1.5 m/s ²
BATTERY FBT-CLB014	
Voltage:	12V d.c.
Capacity:	2 Ah, 24 Wh
CHARGER FBT-CLC011 (not included)	
Input:	220 – 240 V ~ 50–60 Hz, 50 W
Output:	12V d.c.
Charging current:	2400 mA

9.1 TOTAL VIBRATION AND NOISE EMISSION VALUES

The specified total vibration and noise emission values have been measured according to a standardized test procedure (EN 62841-1 & EN 62841-2-4) and can be used to compare power tools with each other. They can also be used for a preliminary assessment of exposure.

WARNING!

- » Vibration and noise emissions may differ from the specified values during actual use of the power tool, depending on how the power tool is used, in particular the type of workpiece being processed.
- » It is necessary to take safety measures to protect the user based on an assessment of vibration exposure during actual operating conditions (taking into account all parts of the operating cycle, e.g., periods when the power tool is switched off and periods when it is switched on but running without load).
- » Aim to keep exposure to vibration and noise as low as possible. Examples of measures to reduce vibration exposure include wearing gloves when using the tool, limiting working time, and using accessories in good condition.

9.2 CHARGING VIA USB

The battery can be charged via a USB-C charger (input 5,0 V d.c., max. 1.8 A) and/or a USB port.

NOTE

- » Only the USB cable is included.

10 WASTE DISPOSAL AND RECYCLING

10.1 DISPOSING OF THE PACKAGING



The product has been packaged to protect it from damage in transit. Packaging materials are raw materials and can therefore be reused or recycled. Please dispose in your recycling bin. This is recyclable.

10.2 DISPOSING OF THE PRODUCT



Dispose of the product in accordance with the applicable laws and regulations for your country.

10.3 BATTERY DISPOSAL



Batteries may not be disposed of with household waste! As the end user you are required by law to bring all batteries and rechargeable batteries, regardless whether they contain harmful substances* or not, to a collection point run by the city or county, or to a retailer, so that they can be disposed of in an environmentally friendly manner.

*labeled with: Cd = cadmium, Hg = mercury, Pb = lead

The product and user manual are subject to change. Specifications are subject to change without notice.

11 WARRANTY

11.1 WARRANTY CERTIFICATE

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

Congratulations! You have made an excellent choice of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defects due to manufacturing faults, ALDI will provide you with a warranty against defects as follows:

The product is guaranteed to be free from defects in workmanship and parts for a period of 3 years (dependant on product) from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion.

The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

11.2 PROOF OF PURCHASE

This warranty is valid for the original purchase and is not transferable. Please keep your purchase docket, tax invoice or receipt as the best proof of purchase, and as proof of date on which the purchase was made.

11.3 EXTENT OF WARRANTY

This warranty is limited to defects in workmanship or parts. All defective products or parts will be repaired or replaced. This warranty does not cover batteries or any other consumable items.

11.4 NORMAL WEAR AND TEAR

This warranty does not cover normal wear and tear to the products or parts.

11.5 EXCLUSIONS

This warranty does not cover:

- Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by the distributor.
- Any product that has not been installed, operated or maintained in accordance with the manufacturer's operating instructions provided with the product.
- Any product that has been used for purposes other than domestic use.
- Any damage caused by improper power input or improper cable connection.

11.6 To Make A Claim

This warranty against defects is provided by:

ALDI Stores, Locked Bag 56, St Marys Delivery Centre, NSW 2760, Phone (02) 9675 9000.

If a defect in the goods appears within 3 years (the identified period on the packaging), you are entitled to claim a warranty, please contact or send all warranty claims to:

ACR Supply Partners Pty Ltd.50 Old Wallgrove Road, Eastern Creek, NSW 2766, AUSTRALIA

Tel: 1 800 130 489 (Mon-Fri 8 am - 8 pm AEST)

Aldi-AU@protel-service.com

When making a return, please ensure the product is properly packaged so as to ensure that no damage occurs to the product during transit. Please provide the original or a copy of the proof of purchase. Also please make sure you have included an explanation of the problem. Please note that the costs of making a warranty claim, including any return postage, will be covered by the supplier identified above. Please note upon receiving your warranty claim, the supplier will send, via the post or email, a repair and refurbished goods or parts notice. Please provide your email address and advise the supplier, if you wish to obtain a repair and refurbished goods or parts notice via email.

11.7 WARRANTY DETAILS

The product is guaranteed to be free from defects in workmanship and parts for a period of 3 years from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

11.8 REPAIR AND REFURBISHED GOODS OR PARTS NOTICE

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1 800 130 489 or write to us at:

ACR Supply Partners Pty Ltd.50 Old Wallgrove Road, Eastern Creek, NSW 2766AUSTRALIA

Tel: 1 800 130 489 (Mon-Fri, 8 am - 8 pm AEST)

Aldi-AU@protel-service.com



DISTRIBUTED BY **ALDI STORES**
1 SARGENTS ROAD,
MINCHINBURY NSW 2770
WWW.ALDI.COM.AU

MADE IN CHINA

V01/0126